

FireWorks ShowAssist

THS FireWorks

Quick Start - Check Show

1. Press Menu at the lower right corner.
2. Press DEVICES in the menu bar.
3. **If Show is loaded:**

All PODs should be visible in the list. If S/N are 99999, then no S/N is set.

 - You can manually set the S/N by pressing the S/N and set the new S/N.
 - If all PODs are connected you can press "Search" to discover all PODs
(The system will check the POD-configuration and attach the POD to right POD in list.
PODs not matching will be added to the list)
Search range can be set under Settings.

If no Show is loaded:
Add PODs by pressing the Add Row button.
If POD is connected, information will be read from POD.
POD can also be added by pressing Search.
4. POLL
Checking if every POD is responding.
Status will be DISARMED, ARMED, ERROR or TEST. POD Voltage will also be displayed.
Poll will continue until Stop Poll is pressed.
5. While polling press **TEST-MODE** button to check that all PODs response to Fire-commands.
All rows shall be orange and on the POD shall both red and blue LED lit.
6. Check
Checking every POD for:
 - Voltage – Will indicate if voltage at the POD are lower than 12V.
 - Programming – Check if the programming of the POD is correct according to Show.
(This will always be indicated if no shows loaded)
 - Error – Check connected e-matches according to configuration in POD.
All configured outputs (Fire-channel <> 0) are expected to have a e-match connected and all un-configured output
(Fire-channel = 0) shall not have any e-match connected.
7. Check at row:
As above (in point 5) but only on selected device.
8. Details at row:
Goes into detailed view of a POD. Here you can change the configuration of the POD, and set different settings of the POD.