

FireWorks ShowAssist

THS FireWorks

Quick start - Fire Show!

1. Check that Safety-key is in OFF-position
2. Attach the power supply (if needed).
3. Attach FireWorks Data/POD-cable to the OUT-connector.
4. Attach audio via
 - 3.5mm stereo outlet.
 - or/and
 - Audio out XLR.
5. Attach Time-code input if used.
6. Switch on the system with the POWER-switch
7. Wait until the systems powers up.
8. Press Menu at the lower right corner.
9. Press OPEN in the menu.
10. Select show to open.
 - Import new show:
 - Press Import Show
 - Select Composer project to import. Press Open.
11. Press Open to load show.
12. Select TRIGGER-mode. (if trigger mode is Trigger in Composer project)
 - TRIGGER - if PODs are programmed for MANUAL-fire.
 - 1st TRIGGER - if PODs are programmed for MANUAL-fire.
the systems will start att FIRST Trigger.
 - MANUAL – For manual-fire.In trigger mode Auto, this step is skipped.
13. Enable/Disable Time-Code. If no Time-Codeis available, Time-Code must disabled!
(Show will not Fire if Enable!!)
14. ARM the system by turning the Safety-key to ON and push the ARM-button
(or on screen, Code needed, default 1234).
15. FIRE by pressing FIRE-button.
Depending on configuration the FIRE-button must be held down during the SHOW.