

FireWorks ShowAssist

THS FireWorks

Quick Start – Test Show

If you want to test a show (test the system), do as follows:

1. Program a POD with standard output 1-16
(output 1 = Fire-channel 1, output 2 = fire-channel 2 e.t.c.)
2. Start-up the system and attach the POD.
Make sure that no other POD is connected and that no e-matches is inserted!
3. Open the show you want to test.
4. Turn of the Safety-key and ARM the system and check that the POD is armed.
5. Start the Show (Pressing Fire or Play)
6. The relays of POD16 shall click the 15 first seconds (ones per second)!
7. Press stop and Disarm.

If not working as expected, check the following things.

- POD will not ARM:

- Check that Safety-key is turned to ON.
- If Safety-key are OK, restart the system by turn it off completely for about 10 seconds.

- POD will not Fire:

- If Time-Code is enabled but not synchronized to any incoming time-code the system will not fire until a synchronization has been established. Turn of time-code if not used!
- Fire-button must be pressed. The system requires that the Fire-Button is pressed during the show. Check Settings to disable this.

Quick Start – Test Music/Time-Code

If you want to test the music output and/or Time-Code input, do as follows:

1. Connect Audio and Time-Code.
2. Start-up the system. (Safety-key OFF)
3. Load the Show.
4. Press PLAY to start the music.
5. Check that the music plays (and Time-code is synchronized if available).